

ORO

FOR CASTING PALLADIUM, YELLOW AND WHITE GOLD UP TO 22 CARAT

Prestige ORO™ is an ultra-premium gypsum bonded investment developed and perfected for the casting of gold up to 22K. To achieve the smoothest casting surface possible, ORO™ incorporates specially graded refractory ingredients along with specialized control chemicals to make it the most user-friendly investments on the market today.

FEATURES


- Highest purity, white gypsum mined from the world's best known deposits
- Uses only a special premium grade cristobalite from America.
- High purity refractory grains, sized to achieve the smoothest casting surfaces possible
- Mixes to a rich, creamy, easy pour consistency
- Reduces surface tension on wax to supply bubble free castings
- Complete removal of investment during water quench
- Controlled expansion properties that are compatible with all injection waxes and commonly used plastic pattern materials.
- Reliable consistency from batch to batch
- Eliminates surface defects obtained using other brands
- Reduces time in finishing. Saves time & money



Independent tests performed by some of the world's best known casting companies, superior investment for casting gold. **"PERFECTION IN JEWELRY CASTING TECHNOLOGY"**

Oro comes in 22.5Kg. Plastic lined Poly Sacks or Ergonomic 22.5Kg. Plastic Drums package or 45Kg. Heavy duty reusable Plastic Drums for containment of used investment.

RECOMMENDED BURNOUT CYCLES

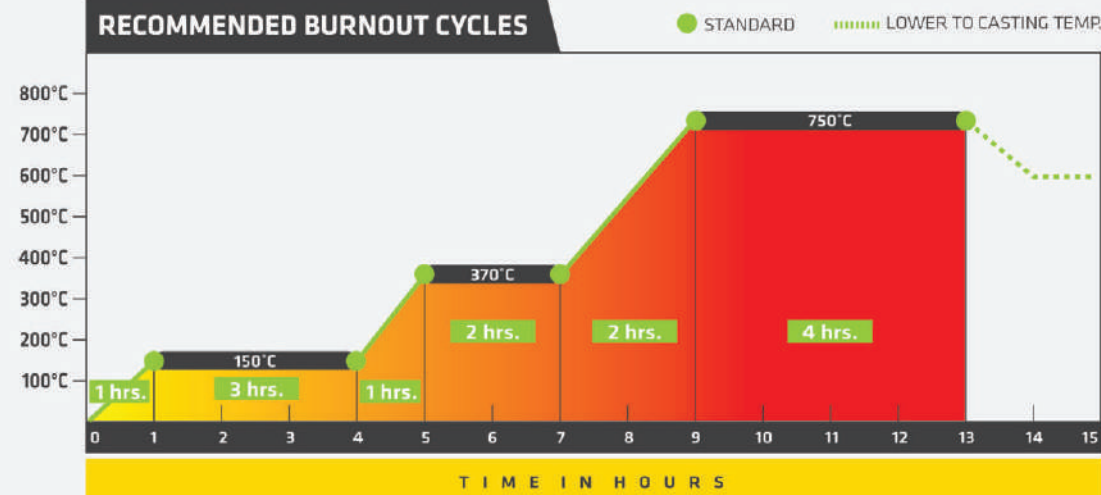

INSTRUCTIONS FOR MIXING

Powder: Water Ratio (38% - 40%)	Powder (Kg.)	Water (cc.)	Powder (Lb.)	Water (cc.)
Automatic Vac. Mixing	1	380	1	172
Conventional Mixing	1	400	1	181.6
Water Temperature °C	21-24	21-24	21-24	21-24

- Increasing the powder amount 1% will decrease the total working time for approximately 30 seconds

Automatic Vac. Mixing Mach.	Minutes
Accurately Weigh Powder / Water	-----
Add Powder to Water	-----
Mixing & Vacuuming	5
Pour into Flask	2
Vacuum Invested Flask	1
Total Working Time	8

- Allow to sit undistributed for 90-120 minutes before burnout

Conventional Mixing Mach.	Minutes
Accurately Weigh Powder Water	-----
Add Powder to Water & Mix	4
Vacuum the Bowl	1
Pour into Flask	1
Vacuum Invested Flask	2
Total Working Time	8

- Allow to sit undistributed for 90-120 minutes before burnout



PRESTIGE INVESTMENT POWDERS